



LCD SECURITY CART

Assembly Instructions

1. Using a Philips screwdriver insert (4) 1/4-20 x 1/2 machine screws to the bottom of the LCD cabinet as shown per fig. 1. Do not tight the screws yet ; leave about 1/8 space between the head of the screw and the cabinet's flange.
2. Install LCD cabinet to drawer cabinet by first lining up the screws, then push back the LCD cabinet until flush with the drawer cabinet. Then tighten screws.
3. Flip lower cabinet upside down and install casters as shows per fig. 3 with (4) 1/4-20 x 1/2 machine screws per caster.
4. Attach wing shelves to top flange of lower cabinet as shown per fig. 4. Make sure wing shelf is centered between the flange's mounting holes.
5. Insert 4 (Thinnerman) fasteners over 4 holes on the drawer's bottom flange as shown per fig. #5.
6. Line-up top assembly from step 2 to bottom cabinet and secure them together with (4) # 10 sheet metal screws from under bottom cabinet.

FIG. #1

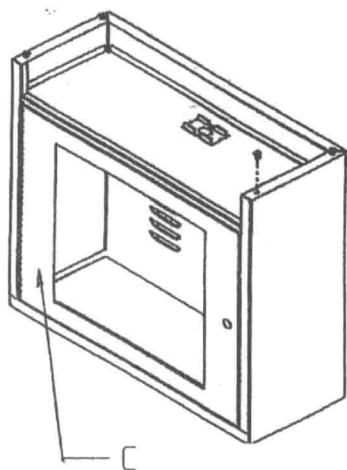


FIG. #3

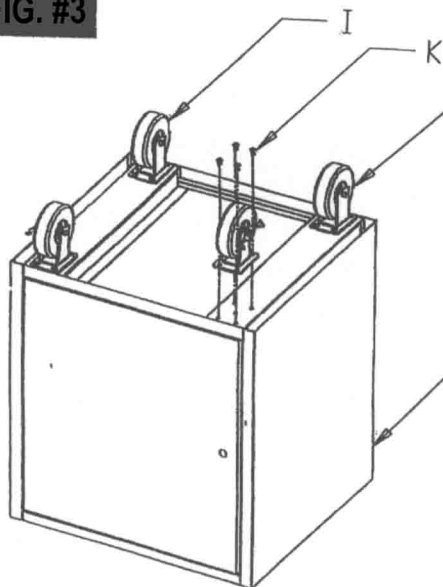


FIG. #5

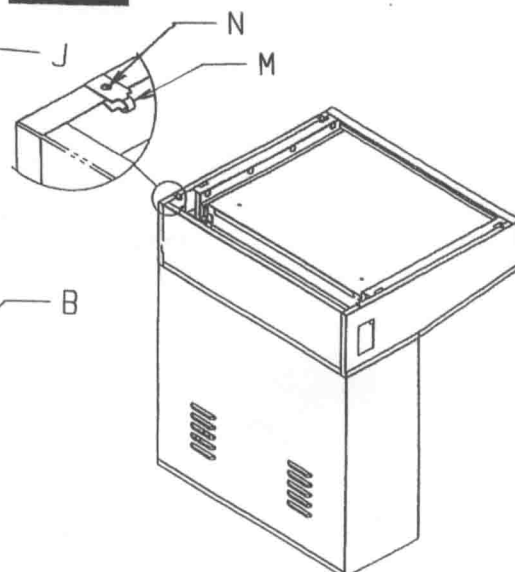


FIG. #2

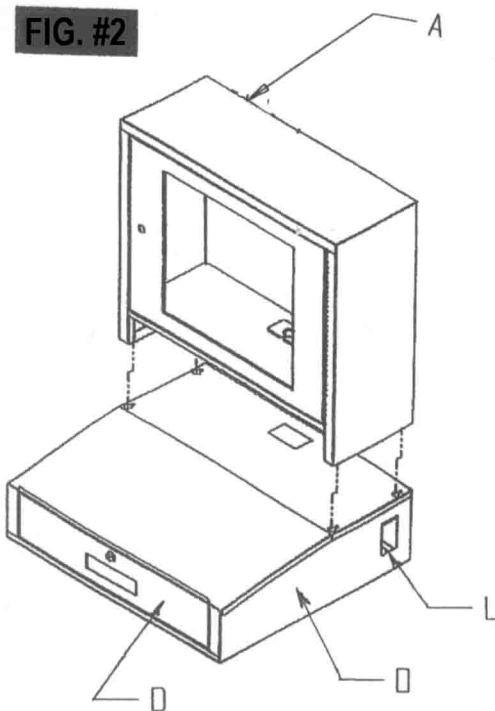


FIG. #4


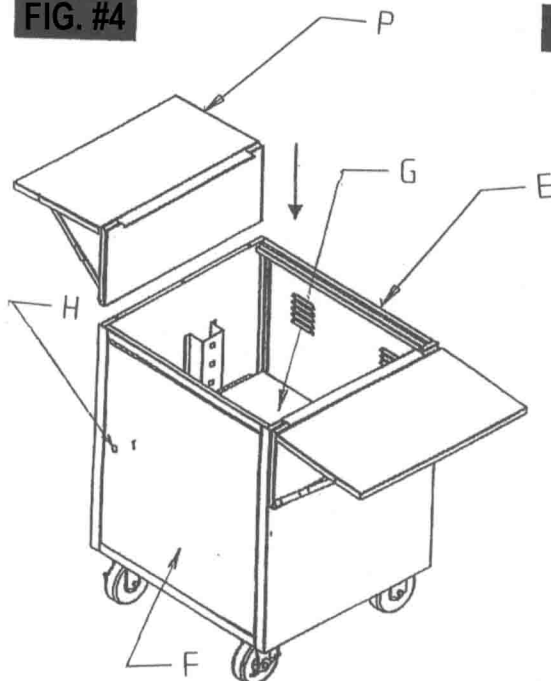


FIG. #6

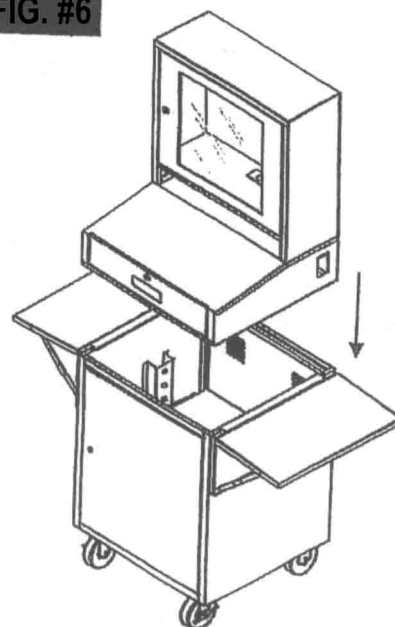

OVER FOR PARTS LIST

#2051256
49805A
49805B

PARTS LIST

Item	Description	Part No.	Qty.
A	Top cabinet	CSC6625A	1
B	Bottom cabinet	CSC6625B	1
C	Top door	4980504A	1
D	Drawer body (key board)	4980513A	1
E	Rear door (bottom cabinet)	4980508A	1
F	Front door (bottom cabinet)	4980508	1
G	Lower shelf (bottom cabinet)	4980503A	1
H	Locks	2087210	4
I	Casters, swivel	2023006	2
J	Casters rigid	2023005	2
K	Machine screws 1/4-20 X 1/2"	2134410	20
L	Bushings	2008930	5
M	Fastener(tinnerman)	2097640	9
N	Sheetmetal screws #10 X 1/2"	2133100	9
O	Center cabinet	4980511B	1
P	Side wings	4980512B	2